




# Sony Cyber-shot DSC-W230 Ribbon Cable Replacement

This guide will explain how to disassemble the Sony Cyber-shot DSC-W230 to an extent allowing the ribbon cable can be removed and replaced.

Written By: Alex

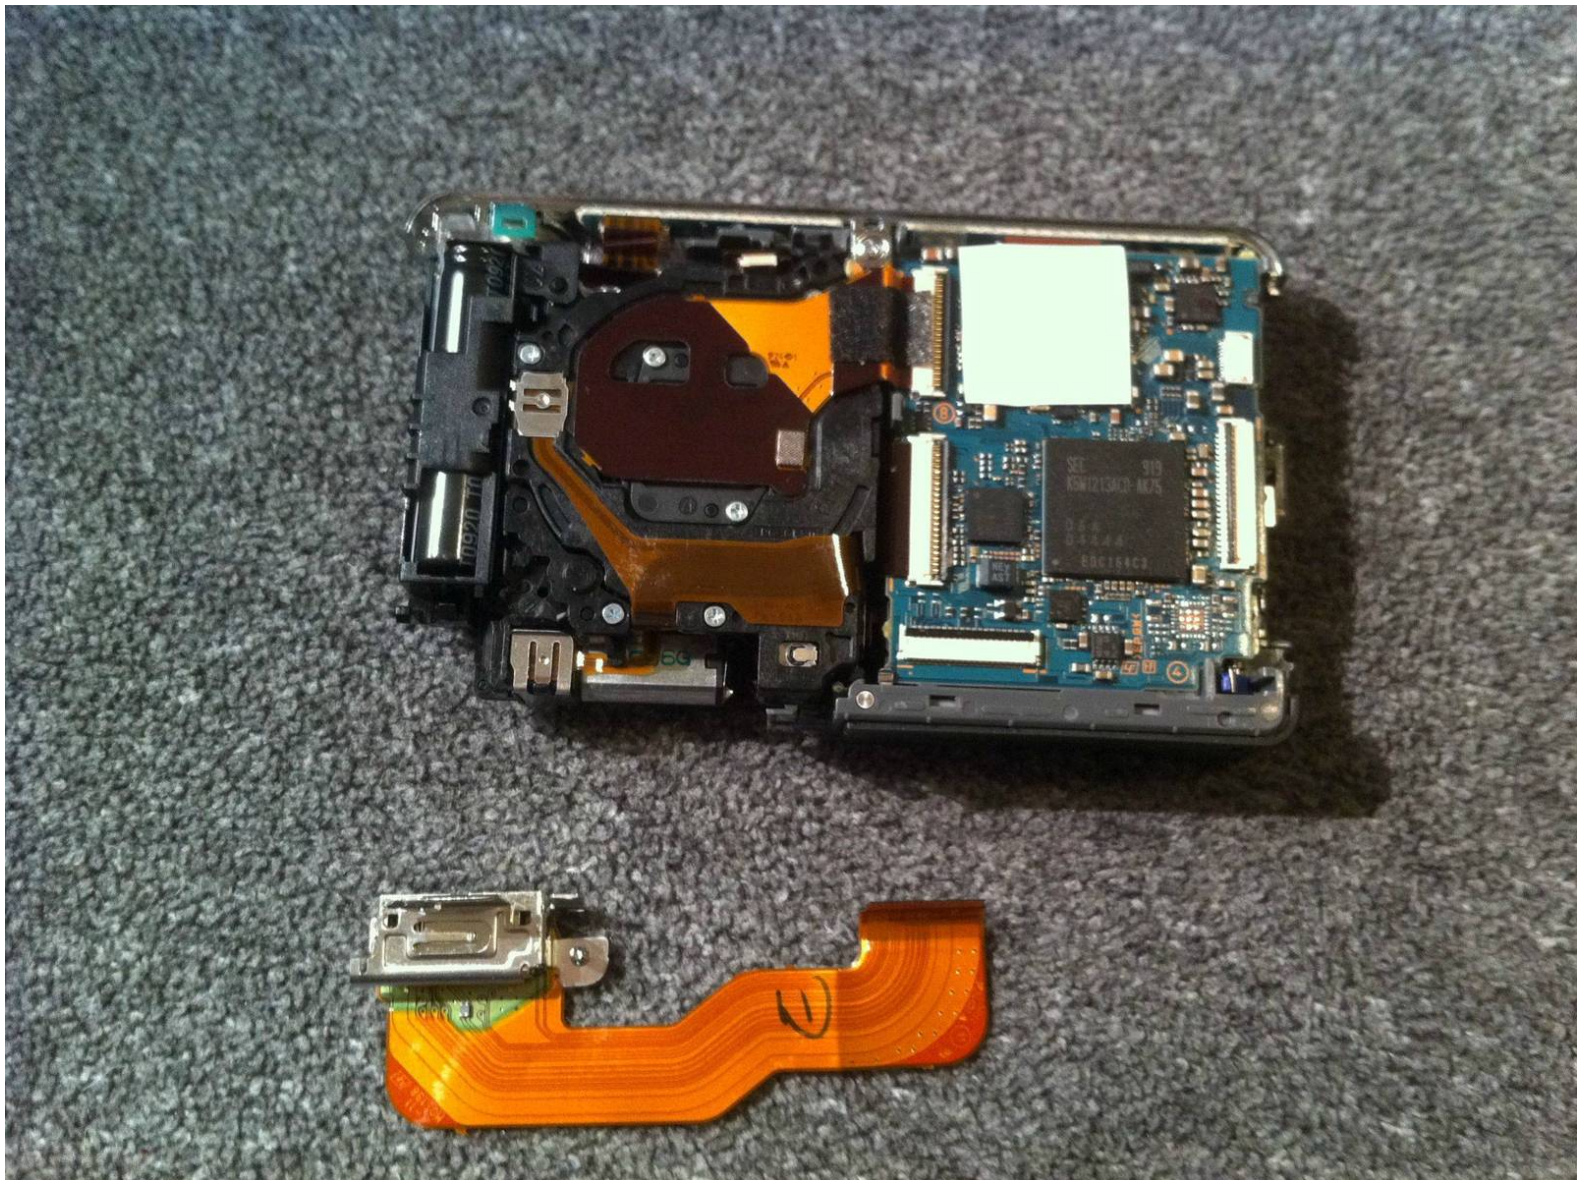



## TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-



## Step 1 — Disassembling Sony Cyber-shot DSC-W230 Exterior Case



- Begin by placing the camera upside down and removing the three small center screws.
- All screws are the same size and length and can be used interchangeably.

## Step 2



- Turn the camera on its side (Counterclockwise). Remove the two small screws on either side of the silver panel.
- Turn the camera 180 degrees onto its other side and remove the two small screws on either side of the silver panel.

### Step 3



- Locate the camera's tripod mount located on the bottom of the camera.
- Carefully remove the camera's tripod mount and place it aside.
- Be careful not to lose this piece.
- Rotate the silver panel labeled 4x clockwise.

### Step 4 — Separating Camera and Display



- Align the camera so that the side with "4x Optical Zoom" is facing toward you.
- Gently twist the bottom corner clockwise until you feel the side panel unlock.
- Lift off the side panel and set aside.



## Step 5



- Rotate the camera 180 degrees to face the side panel with the lanyard loop on it.
- Gently lift the panel vertically until it lifts off

⚠ Take care to not lose the small rectangular portion on the bottom of the panel.

## Step 6




- Position the camera so the bottom is facing up and the display away from the surface.
- Gently pry the screen portion from the camera portion with your fingers or a plastic prybar.

⚠ Do not fully separate the two components! the screen is attached by two ribbon cables.

- Lay the display flat to expose the circuit board and the display control ribbon cables.






## Step 7 — Ribbon Cable

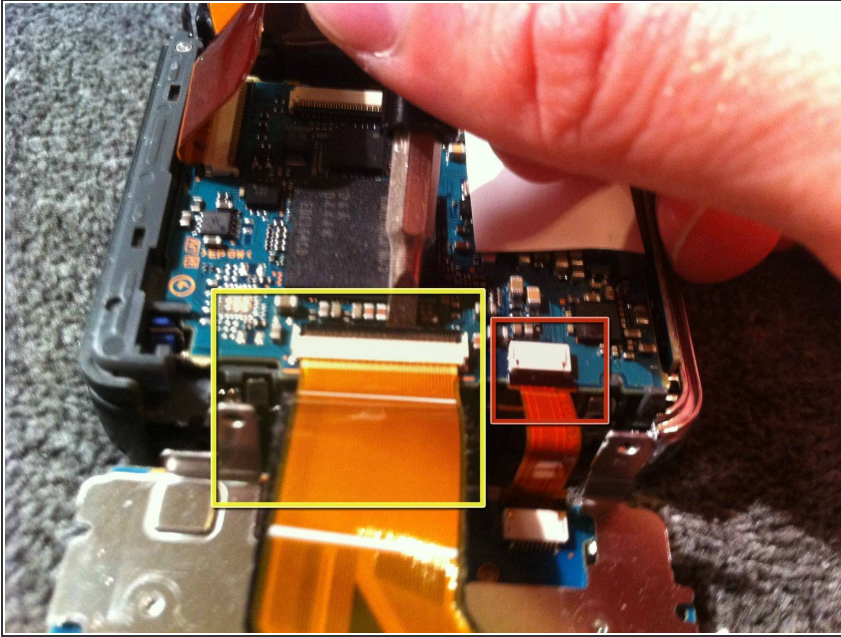

- Using a flat head screw driver gently pry up on the tab securing the larger ribbon cable which connects the display screen and camera sensor / battery housing.
- Remove the ribbon cable connecting the LCD display and camera sensor / battery housing.
- Following the same procedure, uninstall the ribbon cable connecting the main camera controls to the camera sensor and battery housing

## Step 8

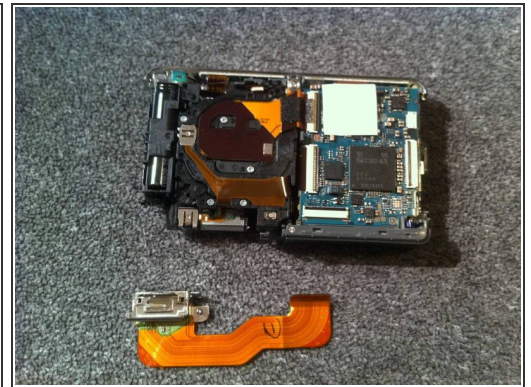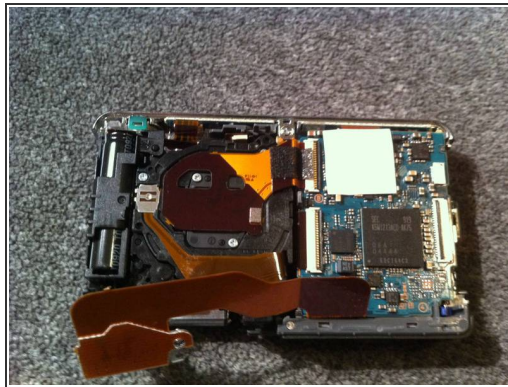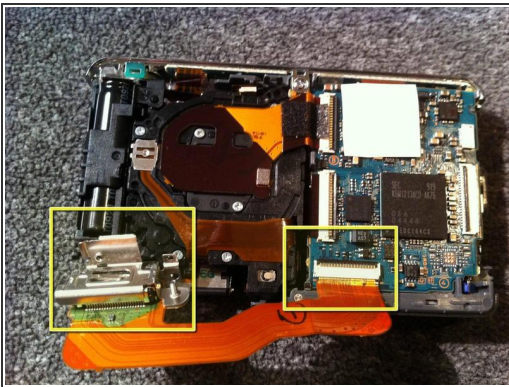

- Now turn your attention to the camera sensor and battery housing. Identify the two connection points of the large ribbon cable.
- Carefully place a flathead screwdriver under the left ribbon cable connection point and pull up to disconnect.
- Repeat the previous step but this time carefully remove the right ribbon cable connection point.
- After both sides of the ribbon cable have been disconnected it is ready to be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 06:22:27 AM.